HOME
DECORATORS
C O L L E C T I O N

HDC# 16631 MFG# TW-19430WE / TW-19430BK
HUDSON DOUBLE VANITY 35"Hx72"Wx22"D

ASSEMBLY INSTRUCTIONS

Note: 1. Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.
2. You need at least 2 people to finish the assembly of this product.

Made In China

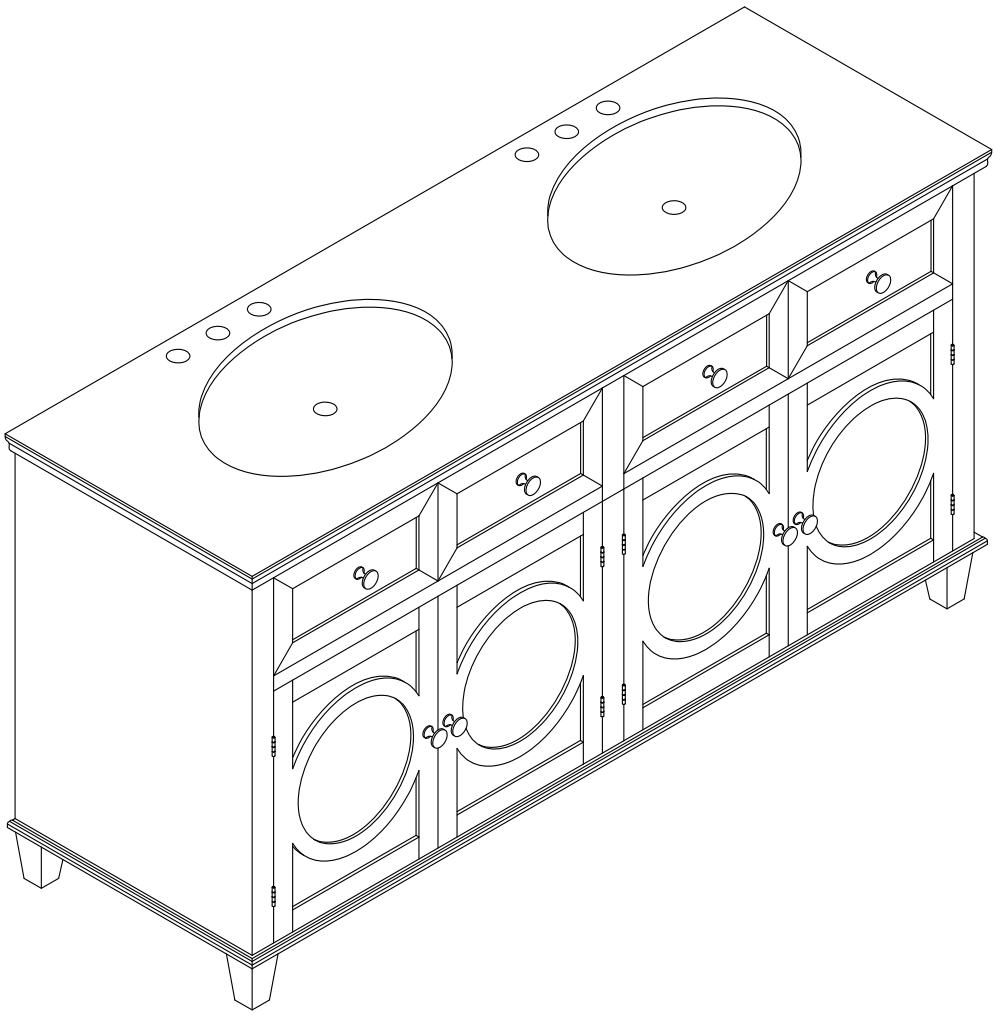

BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. FOLLOWING INSTRUCTIONS LISTED BELOW IN THE PROPER SEQUENCE AS NUMBERED TO ASSURE FAST, EASY AND CORRECT ASSEMBLY.

ASSEMBLY TOOLS REQUIRED

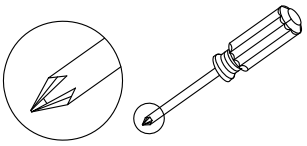

"+"Screw driver

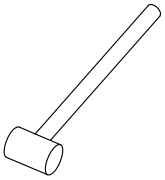

Rubber Mallet

WOODEN DOWEL INSTALLATION PROCEDURE

(1) FILL HOLE 1/4 FULL OF GLUE.
(2) GENTLY TAP DOWEL INTO HOLE
WITH RUBBER MALLET OR USE HAND
PRESS IN.
DO NOT USE HAMMER
(3) WIPE AWAY EXCESS GLUE.

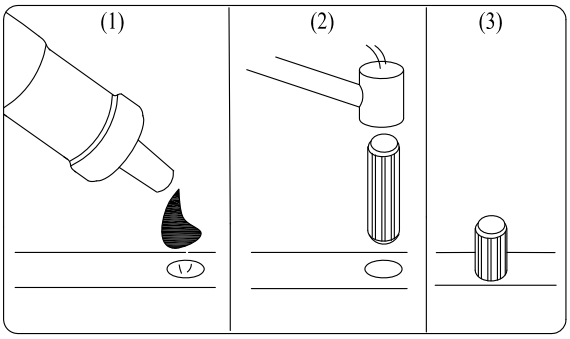

THANK YOU FOR PURCHASING THIS QUALITY PRODUCT. BE SURE TO CHECK ALL PACKING MATERIAL CAREFULLY FOR SMALL PARTS, WHICH MAY HAVE CAME LOOSE INSIDE THE CARTON DURING SHIPMENT. COUNT ALL PARTS AND MATERIAL HARDWARE, COMPARE WITH PARTS LIST TO BE SURE ALL PARTS ARE PRESENT. IF ANY PARTS ARE MISSING OR DAMAGED, PHONE, FAX OR MAIL TO OUR CUSTOMER SERVICE DEPARTMENT. FOR EFFICIENT AND SPEEDY SERVICE, PLEASE INDICATE THE MODEL NUMBER AND CODE LETTER OF THE PART NEEDED.

HARDWARE LIST

WOOD DOWEL 16 PCS  ϕ8X30mm (1)	ROUND HEAD BOLT FLAT WASHER SPRING WASHER 20 SETS  ϕ6X32mm (2)	MAGNET LOCK FLAT HEAD SCREW 2 SETS  ϕ3X12mm (3)	KNOB BOLT 8 SETS  (4)	IRON SLICE FLAT HEAD SCREW 4 SETS  ϕ3X6mm (5)
HINGE FLAT HEAD SCREW 8 SETS 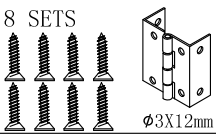 ϕ3X12mm (6)	SHELF HOLDER 8 PCS (7)	ROUND HEAD SCREW 24 PCS ϕ3X12mm (8)	ALLEN KEY 1 PC  (9)	GLUE 1 PC 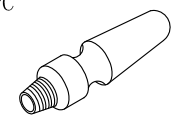 (10)

PARTS LIST

BOX 1

BOTTOM PANEL 1 PC 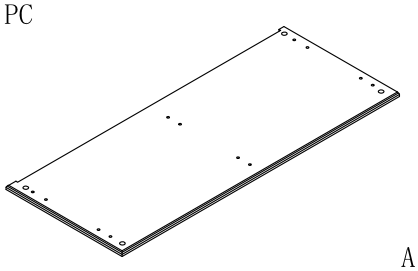 A	TOP FRAME 1 PC 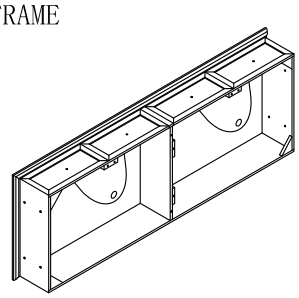 C	SHELF 2 PCS 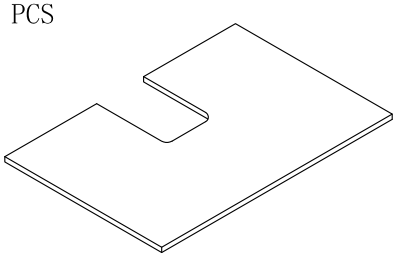 I

BOX 2

LEG 4 PCS B	LEFT SIDE PANEL 1 PC 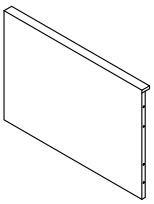 D	RIGHT SIDE PANEL 1 PC 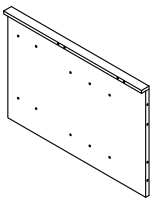 E
MIDDLE PANEL 1 PC 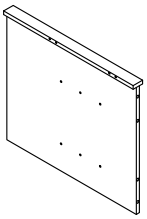 F	DOOR 2 PCS 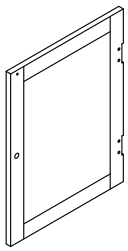 G	DOOR 2 PCS 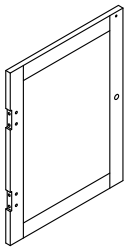 H
BACK PANEL 2 PCS  J	BACK PANEL 1 PC  K	LEG 1 PC L

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

STEP 1: ASSEMBLE BOTTOM PANEL (A), LEG (B) AND LEG (L)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD SCREW, SPRING WASHER AND FLAT WASHER (2) TO ASSEMBLE BOTTOM PANEL (A) AND LEG (B) TOGETHER BY ALLEN KEY (9).
- ROTATE LEG (L) ONTO BOTTOM PANEL (A) TIGHTLY.

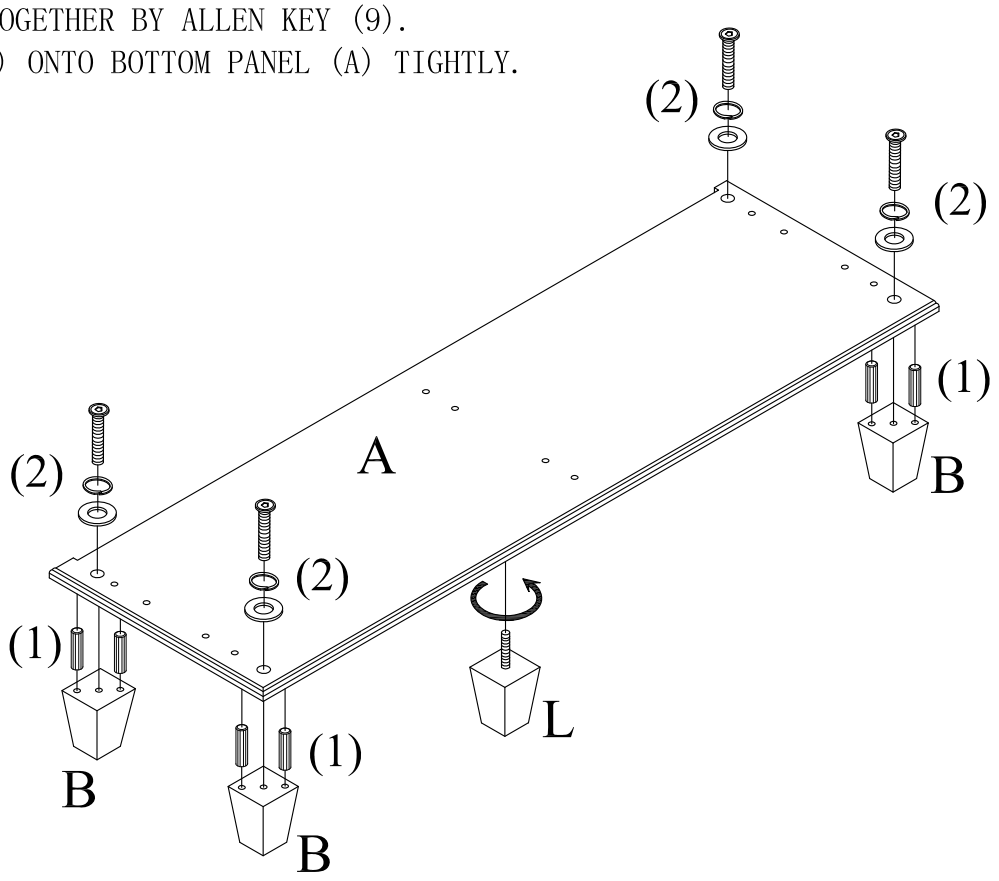

STEP 2: ASSEMBLE MAGNET LOCK (3) AND KNOB (4)

- USE FLAT HEAD SCREW (3) TO ATTACH MAGNET LOCK (3) UNDER TOP FRAME (C).
- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO TOP FRAME (C).

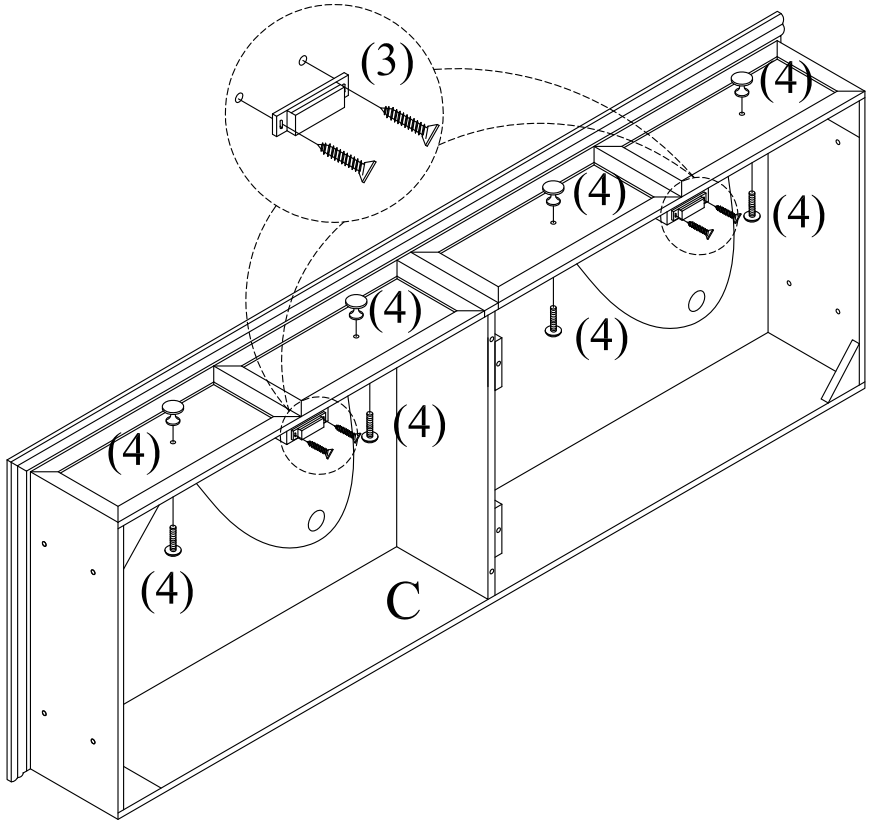

STEP 3: ASSEMBLE SIDE PANEL (D & E)

- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) TO ASSEMBLE TOP FRAME (C) AND SIDE PANEL (D & E) TOGETHER AS SHOWN.

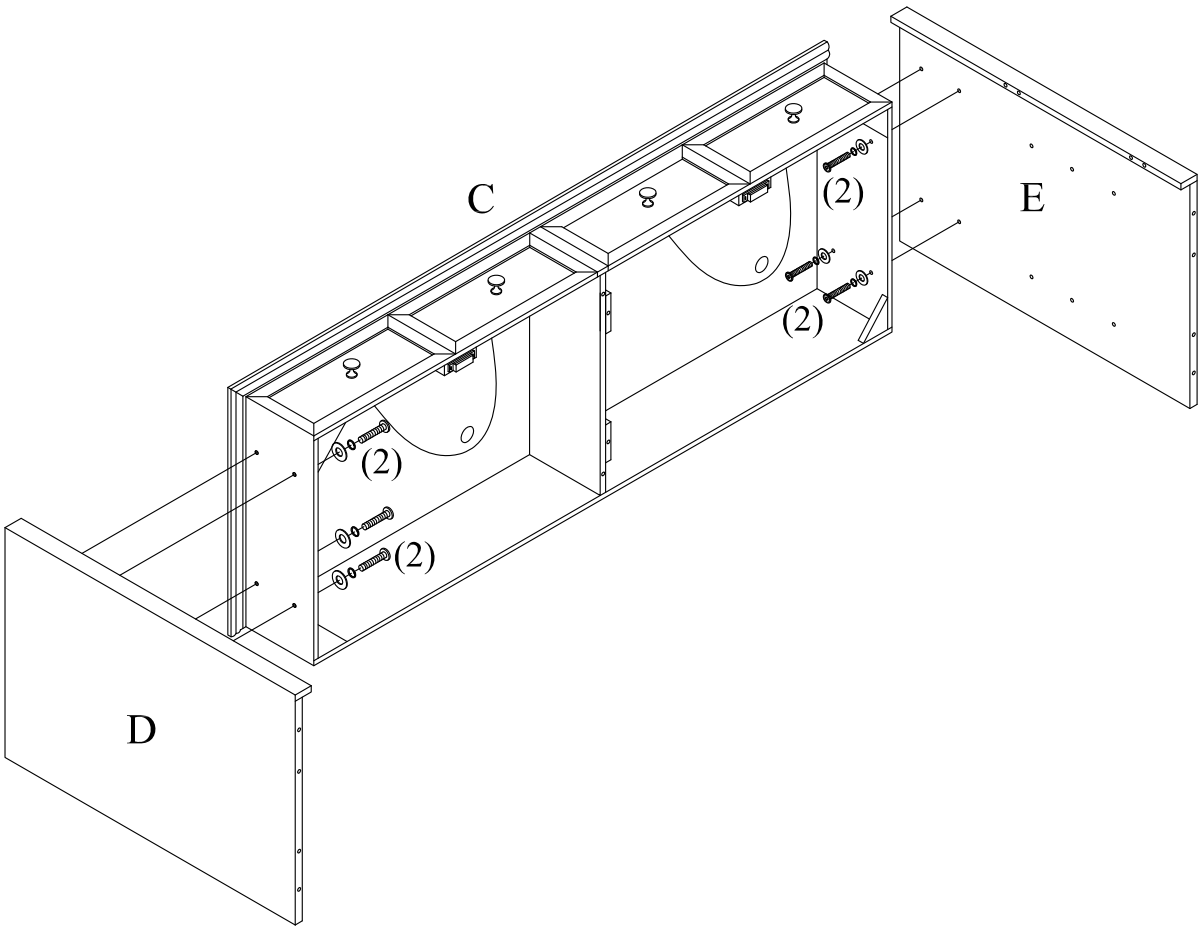

STEP 4: ASSEMBLE MIDDLE PANEL (F)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) TO ASSEMBLE MIDDLE PANEL (F) AND TOP FRAME (C) TOGETHER AS SHOWN.

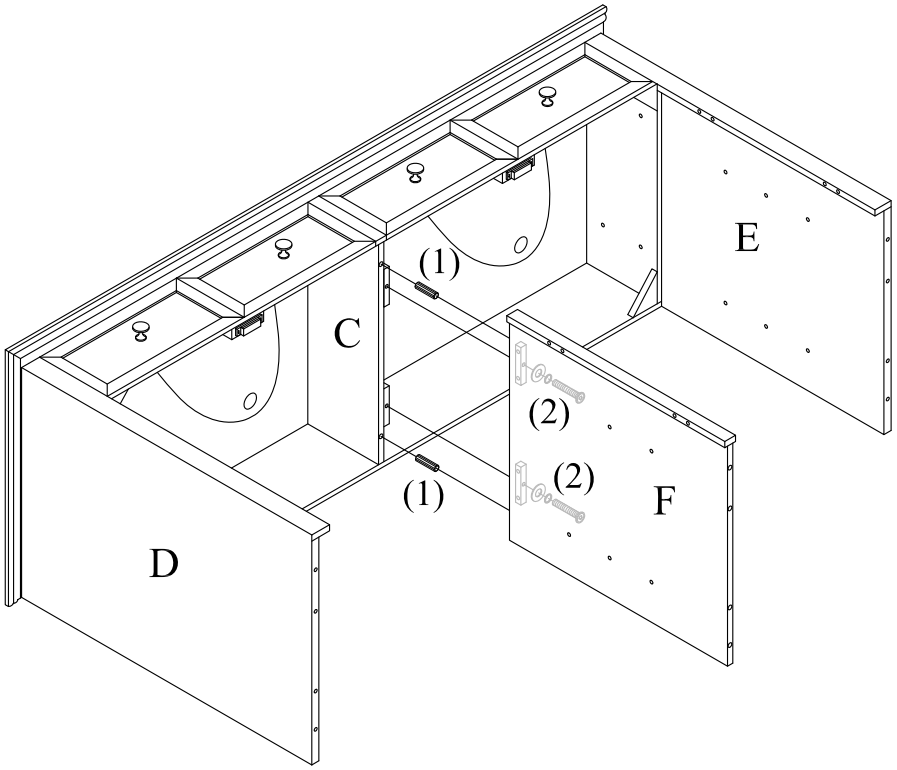

STEP 5: ASSEMBLE BOTTOM PANEL (A)

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT, FLAT WASHER, SPRING WASHER (2) TO ASSEMBLE BOTTOM PANEL (A), SIDE PANEL (D & E) AND MIDDLE PANEL (F) TOGETHER AS SHOWN.

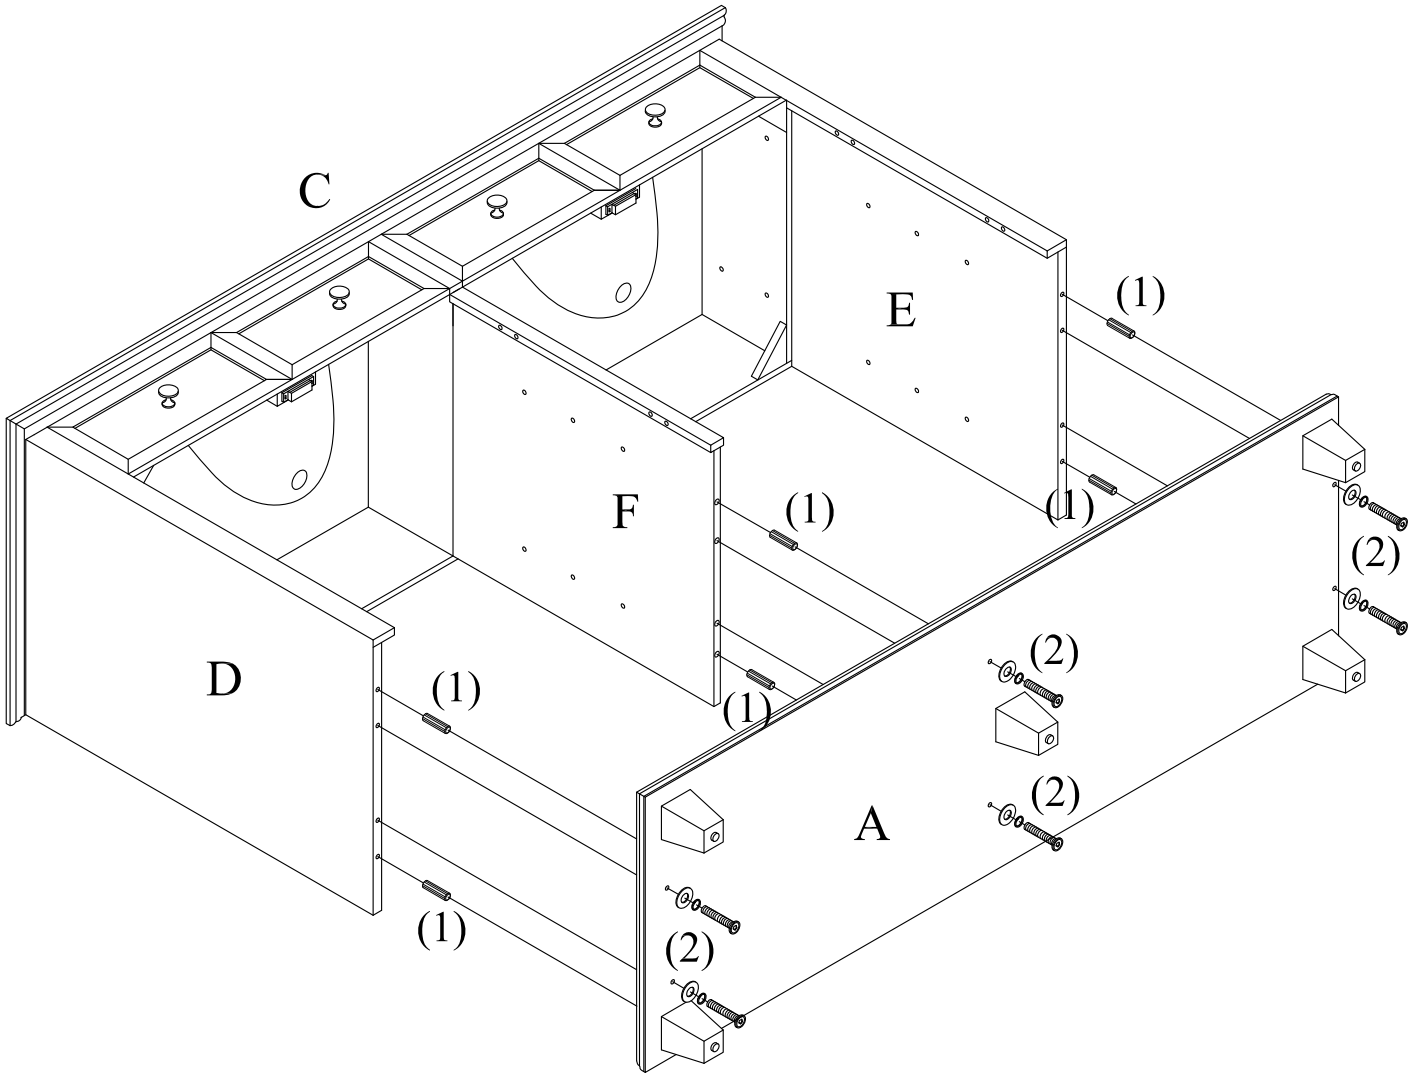

STEP 6: ASSEMBLE KNOB (4), HINGE (6) AND IRON SLICE (5)

- USE ROUND HEAD BOLT (4) TO ATTACH KNOB (4) ONTO DOOR (G & H).
- USE FLAT HEAD SCREW (6) TO ATTACH HINGE (6) ONTO DOOR (G & H).
- USE FLAT HEAD SCREW (5) TO ATTACH IRON SLICE (5) ONTO DOOR (G & H).

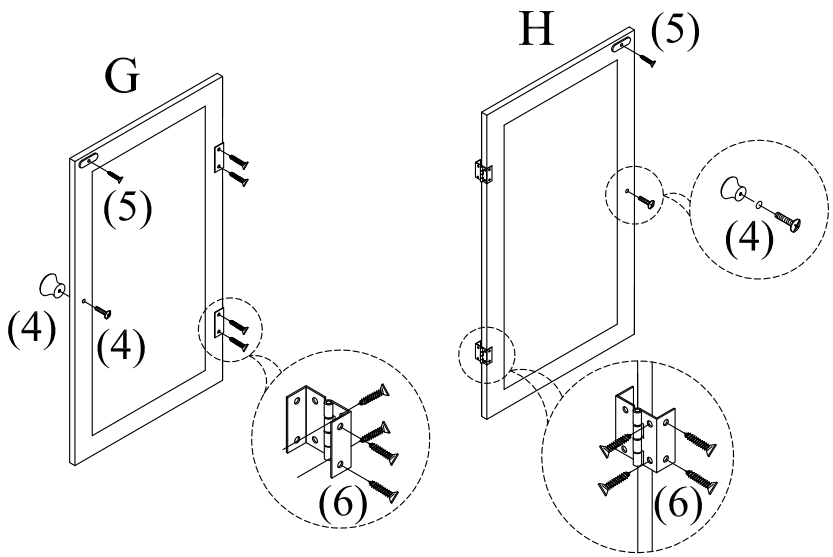

STEP 7: ASSEMBLE DOOR (G & H)

• USE FLAT HEAD SCREW (6) AND HINGE (6) TO ASSEMBLE DOOR (G & H) ONTO SIDE PANEL (D & E) AND MIDDLE PANEL (F).

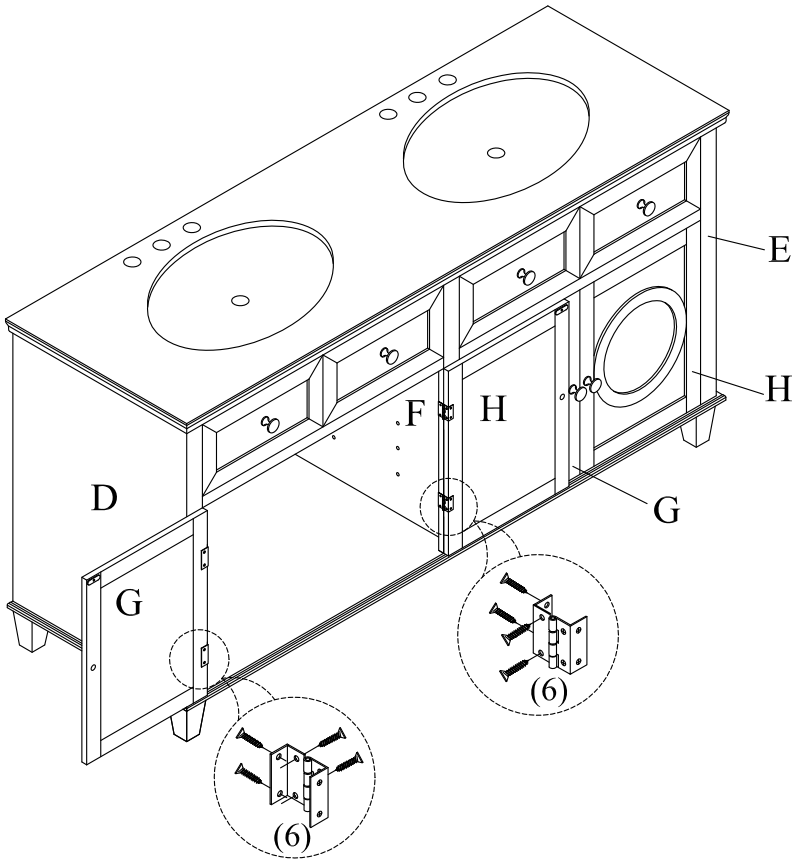

STEP 8: PLACE SHELF (I)

• INSERT SHELF HOLDERS (7) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (D & E) AND MIDDLE PANEL (F), THEN PUT SHELF (I) ON THEM AS SHOWN.

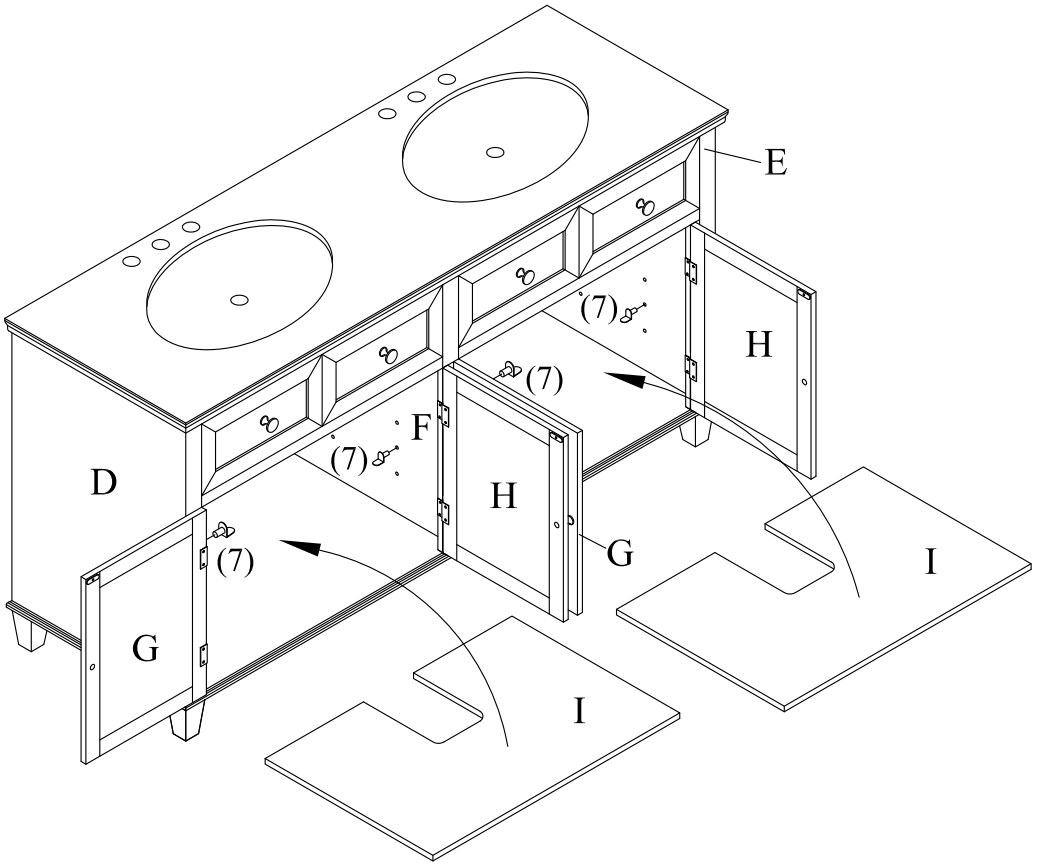

STEP 9: ASSEMBLE BACK PANEL (J & K)

• USE ROUND HEAD SCREW (8) TO ATTACH BACK PANEL (J & K) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE: BEFORE YOU ASSEMBLE THE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS AND DOORS HAVE AN EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS AND ADJUST DOORS UNTIL EVENLY SPACED, THEN ATTACH BACK PANEL.

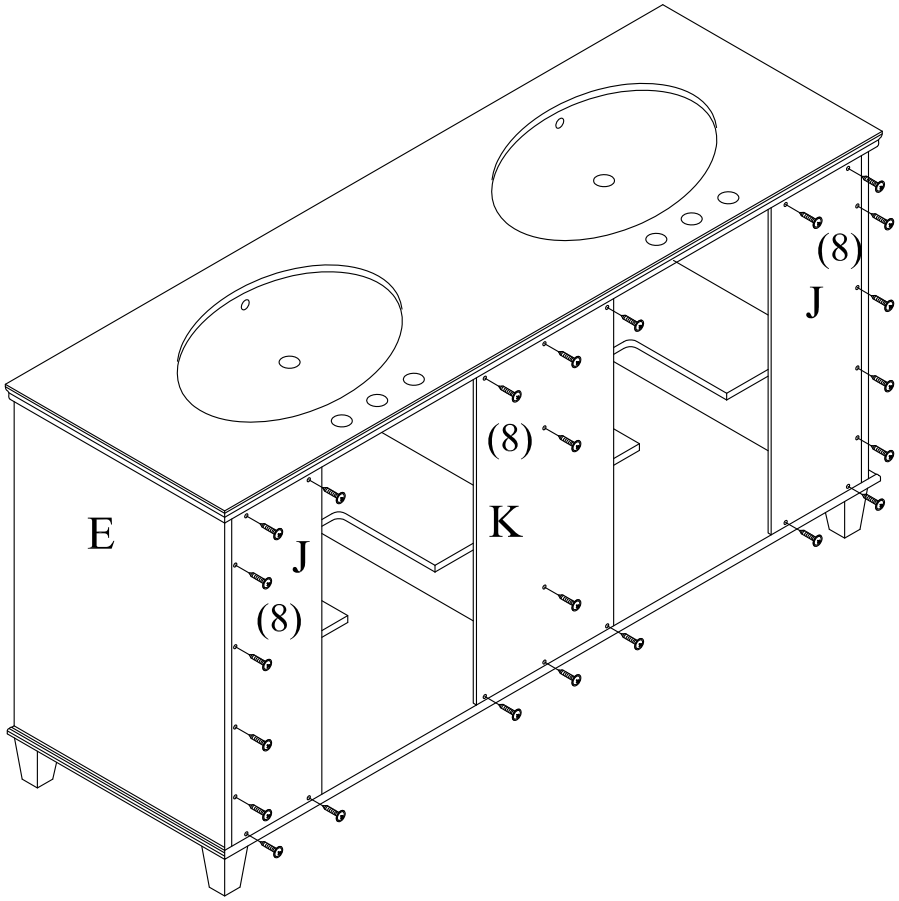

STEP 10: COMPLETE